
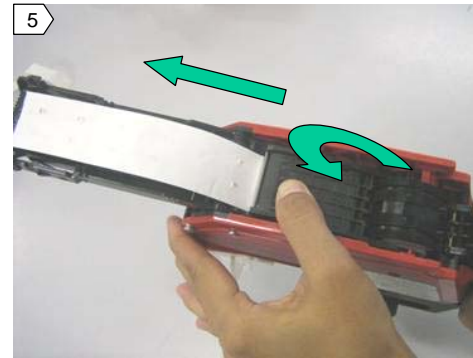


# Hand Labeler Model PB3 Loading Instructions

## Loading Instructions









- 1 - PB3 Hand Labeler and label
- 2- Open the Bottom Cover, label holder cover and pull out the Platen.
- 3- Place the Label in-side and beware the direction of label. Push the label inside the body.
- 4- Pole the label and push in inside body and label will come out from platen, pull out the label
- 5- Close back the platen and squeeze the handle to make sure the label is feeding.
- 6- Close the bottom cover until the you hear 'click' sound.
- 7 - Click for testing

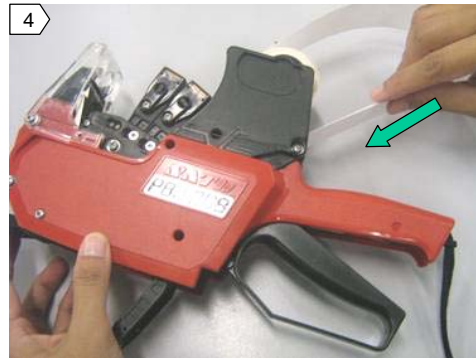

# Changing the Ink Roller on the Model PB3

## Changing the Ink Roller

- 1- Pull out the ink roller cover from hand labeler body.
- 2- Hold the holder press out the black ink to the table and ink roller will separate separately
- 3- Take the ink roller (yellow holder) only slid out .
- 4 - Take new ink roller and replace to the ink roller holder, slide in until the center.
- 5- Take new Ink Roller and place at the correct position.
- 6 - Turn over the ink roller cover and press at the table to make sure the shaft place inside the holder, make sure the new ink roller assembly at the correct position.
- 7- Place ink roller holder cover to the shaft .
- 8 - Push the holder on both sides to close the ink roller arm
- 9- At the same time close the ink roller cover to the body until you hear 'click' sound.

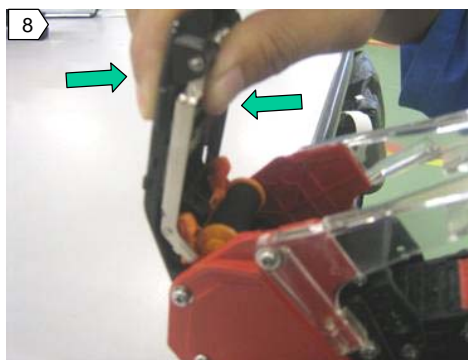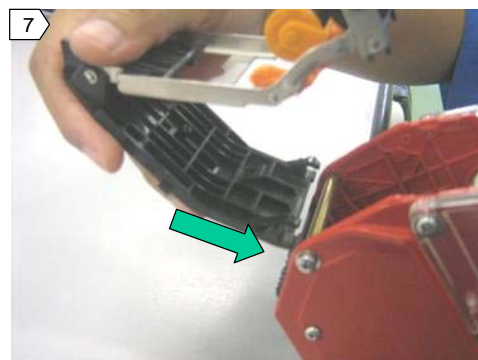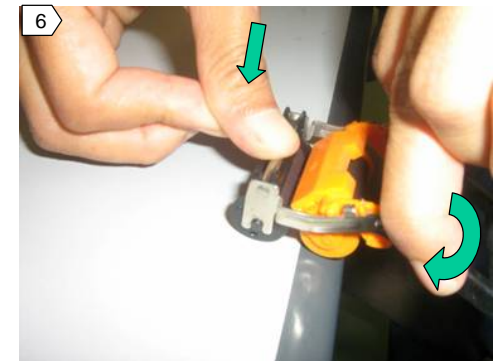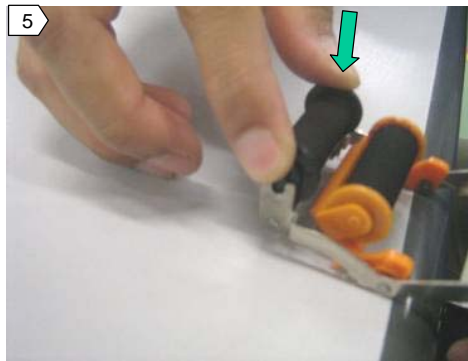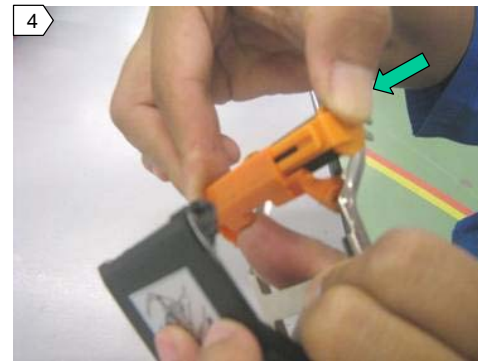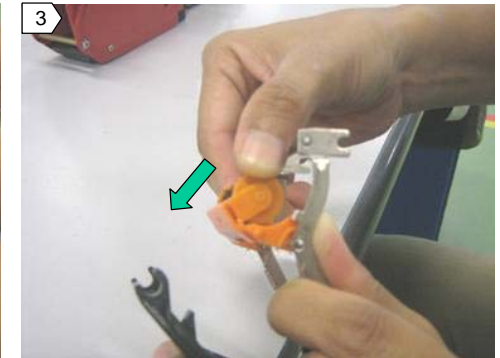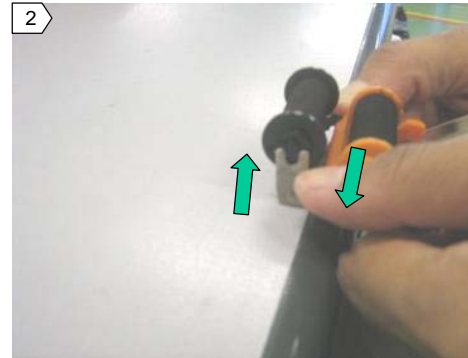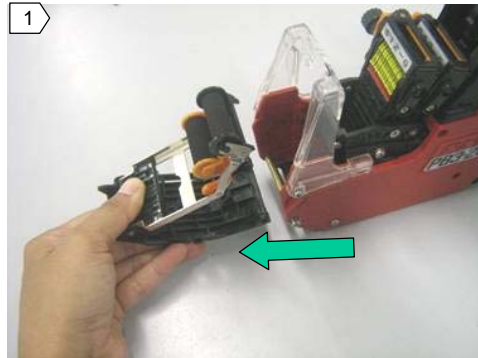

Avery Dennison Printer Systems Division  
170 Monarch Lane Miamisburg, OH 45342  
1-800-214-0872 Monday-Friday, 8 AM-5:00 PM EDT  
[www.monarch.averydennison.com](http://www.monarch.averydennison.com)  
©2009 Avery Dennison. All rights reserved. Printed in U.S.A.